

TM



The Wood Company

Installing Wall Brackets for a Window Box

Enclosed

2 Brackets

4 screws 5.0 x 50 long

2 screws 4.0 x 30 long

4 8mm plugs

You will need

8mm diameter masonry drill bit for plugs

Electric drill

No2 Philips screwdriver

Hammer

Spirit Level

Installation

1. The brackets are to be installed onto a solid structure (wall) with the long side of the bracket fixed to the wall.
2. Check the centre distance of the Window Box feet and position your brackets at this distance apart.
3. Mark position of the holes for one bracket making sure that it is vertical.
4. Drill the holes with 8mm masonry drill to depth of c 50mm checking that they are deep enough to take the plugs.
5. Insert plugs and fix first bracket with long screws.
6. Using a spirit level between brackets, position and mark holes for second bracket.
7. Repeat as above and fix bracket.
8. Position planter and fix with the small screws, 1 screw per bracket into the feet if required.

Plugs and screws supplied are for solid walls. If in doubt as to their suitability please consult a qualified technician.



TM

The Wood Company



Made in
Britain

Chichester, West Sussex

08448 707 148


sales@thewoodcompany.co.uk | www.TheWoodCompany.co.uk

TM



The Wood Company

Typical Bracket (may vary)

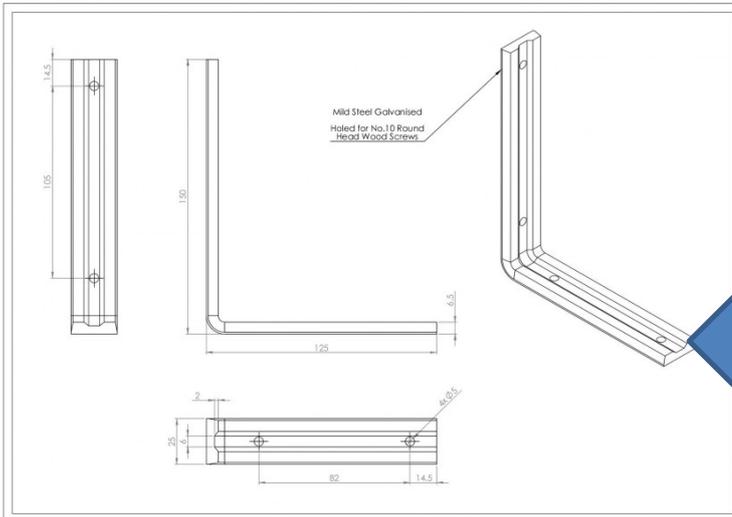

Only one screw per bracket is used to fix the Window Box to the bracket.



TM



The Wood Company

Made in Britain

Chichester, West Sussex

08448 707 148

sales@thewoodcompany.co.uk | www.TheWoodCompany.co.uk

TM



The Wood Company



Installing Window Sill Brackets for a Window Box

Enclosed

2 Brackets (may vary from illustration)

4 screws 4.5 x 40 long

4 screws 4.0 x 19 long

4 6mm plugs

You will need

6mm diameter masonry drill bit for plugs

Electric drill

No2 Philips screwdriver

Hammer

Installation

1. The brackets are to be installed onto a solid structure.
2. Check the position required for the brackets, the bracket should be installed in the slot.
3. Mark the hole position of the holes for the brackets.
4. Drill the holes with 6mm masonry drill to depth of c 45mm checking that they are deep enough to take the plugs.
5. Insert plugs and fix brackets with long screws.
6. Position planter and fix with the small screws into the back of the window box if required.



TM

The Wood Company



Made in
Britain

Chichester, West Sussex

08448 707 148

sales@thewoodcompany.co.uk | www.TheWoodCompany.co.uk

TM



The Wood Company

Installing Balcony Brackets for a Window Box

Enclosed

2 Brackets (may vary from illustration)

Installation

1. Assemble the brackets
2. Adjust to fit the balcony
3. Adjust to fit the Window Box
4. Fit over balcony and place Window Box in brackets



TM

The Wood Company



Made in
Britain

Chichester, West Sussex

08448 707 148

sales@thewoodcompany.co.uk | www.TheWoodCompany.co.uk